


HEATIT WIFI6

Quick Guide

Article no.	Doc. version	Doc. date
54 305 41	Ver C	15.11.2024
54 305 42		

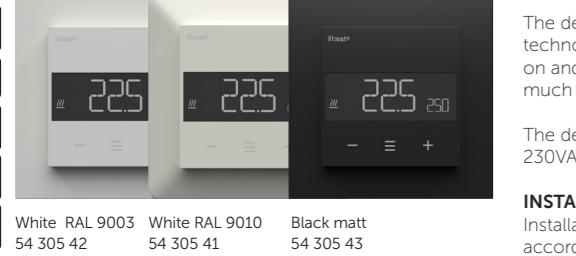

INTRODUCTION

Heitat WiFi6 is an electronic thermostat designed for electrical heating and water based heating control. The thermostat can be controlled using the "MyHeatit" App via Wi-Fi, or via the buttons on the front of the thermostat. You can also use Bluetooth (BLE) during the setup of the thermostat. The thermostat has a user friendly interface.

Heitat WiFi6 has 3 modes; Heat - Cool and Eco.

The thermostat fits in standard European junction boxes and may be used with most System 55 frames. It has a sturdy metal frame for secure fastening in the junction box. The thermostat has a built-in room temperature sensor. Two additional external temperature sensors may also be connected. The device has an open API and supports Amazon Alexa and Google Home (open API, Amazon Alexa and Google Home is pending).

The installer configures the system via Wi-Fi. If Wi-Fi is not available, the system can be configured via Bluetooth. After the system is set up, the installer can add the property to the customer. The customer can then add the system to their local Wi-Fi network.



All our new Heitat products with Wi-Fi support will be supported through our app; "MyHeatit". In the "MyHeatit" App, you can create your own profiles such as "Home - Away - Night - Holiday" and thus control, monitor and organize all the connected devices, or control them via weekly schedule.

The thermostat can communicate over a local API, where the user can make integration with a local gateway, server or controller that offers such a service.

Heitat WiFi6 has active power metering, and it gives you the real time information about the power consumption. It also allows you to set the power metering value manually in case of connection with a contactor.

The device has implemented ZeroXTM technology. This technology makes sure the relay switches at 0V when turning on and off. With this technology the thermostat will have a much longer lifetime.

The device can withstand a load of max. 16A/3600W at 230VAC. We recommend a contactor for loads above 13A.

INSTALLATION DISCLAIMER

Installation must be done by a qualified electrician in accordance with national building codes. Before installation, disconnect the power to the device from the mains. During installation of the device, power to the device must be disconnected AT ALL TIMES!

QUICK START

Upon connecting the device to power, it will automatically enter add mode for a duration of 60 minutes.


1. Switch off the mains voltage (disable the fuse).
2. Open the junction box.
3. Connect the wires according to the description in chapter "Connections". Optional: Connect external wired sensors.
4. After verifying the connections, switch on the mains voltage.
5. In the "MyHeatit" App, choose 'Add Device', enter your Wi-Fi details, search for and select your device.
6. The thermostat will display "INCL" when the thermostat is successfully added.

NB! If adding/removing fails, Err (error) will appear in the display.

CONNECTIONS

Max tightening torque for terminal screws: 2Nm.
If the cable used has multiple strands, using a end sleeve is advised. The product allows for wiring of cables with a cross section of up to 1x2.5mm².

To access the terminal screws, hold the sides of the display and gently pull outwards to detach the front piece.

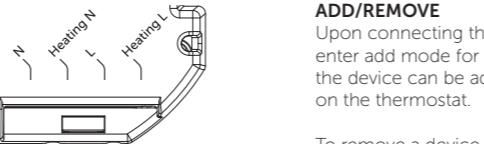

Floor sensor NTC type 6.8, 10, 12, 15, 22, 33, 47 or 100kΩ. Default 10kΩ.


External sensor NTC type 6.8, 10, 12, 15, 22, 33, 47 or 100kΩ. Default 10kΩ.

N Power connection (Neutral) 230VAC.

Heating N Heating cable N connection.

L Power connection (Live) 230VAC.

Heating L Heating cable L connection.

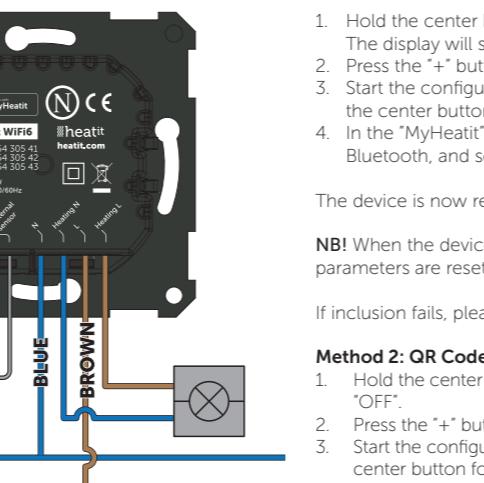

INSTALLATION

Position the thermostat and mount it into the junction box using 2 screws. Position the thermostat front over the part mounted in the junction box, then carefully press the front until it clicks into place. In order to get power metering values, the load needs to be connected to both heating L + N.

Never change the front from one thermostat to another.

ADD/REMOVE

Upon connecting the device to power, it will automatically enter add mode for a duration of 60 minutes. During this time the device can be added to the app without starting add mode on the thermostat.

To remove a device, find the device in the "MyHeatit" App and choose "Delete this device". If the app is unavailable, or if the thermostat is unreachable from the app, perform a "Factory Reset".

Method 1: Wi-Fi and Bluetooth

Add mode is indicated on the device by rotating LED segments in the display. It indicates this for 90 seconds until a timeout occurs, or until the device has been added to the network. Add mode may also be cancelled by performing the same procedure as for starting add mode.

1. Hold the center button for 5 seconds. The display will show "OFF".
2. Press the "+" button once to see "CON" in the display.
3. Start the configuration mode on the device by holding the center button for approximately 2 seconds.
4. In the "MyHeatit" App, choose 'Add Device'. Choose Wi-Fi or Bluetooth, and search for your device and select it.

The device is now ready for use with default settings.

NB! When the device is removed from the "MyHeatit" App, the parameters are reset.

If inclusion fails, please perform a "Factory Reset".

Method 2: QR Code

1. Hold the center button for 5 seconds. The display will show "OFF".
2. Press the "+" button once to see "CON" in the display.
3. Start the configuration mode on the device by holding the center button for approximately 2 seconds.
4. In the "MyHeatit" App, "Add Wi-Fi device" or "Add Bluetooth device".
5. Press the QR Code button in the bottom right and scan the QR code on the device.

CHOICE OF SENSOR

The thermostat has multiple sensors and sensor modes. This lets you configure the thermostat to work correctly in most installations. The sensors and modes may be selected from either the local settings menu or via Parameter 2: "Sensor mode ("OPER")".

Available sensor modes:

- | | |
|------|---------------------------------------|
| F | Floor sensor |
| A | Internal room sensor |
| AF | Internal room sensor + Floor sensor |
| A2 | External room sensor |
| A2F | External room sensor + Floor sensor |
| PWER | Power regulator mode (no sensor used) |

NOTE: Some types of floor require that a floor sensor is connected in order to limit the floor temperature to a maximum of 27°C (check the manual from the floor manufacturer). When the thermostat is used in (AF or A2F) the floor limiter FHI is automatically set to 27°C. When using any other sensor type (A, F or A2) the minimum and maximum limits are 5°C and 40°C respectively.

DISPLAY ICONS

ICON	DESCRIPTION
	This icon will be displayed while the device is in Heat or Eco mode, and is currently heating.
	This icon will be displayed while the relay is on and the device is in Cooling mode.
	This icon shows the current signal strength for Wi-Fi.

TECHNICAL DATA

Protocol	Wi-Fi 2.4GHz/BLE
Rated voltage	230VAC 50Hz
Max load	3600W 16A (resistive load) Contactor recommended for loads above 13A
Max current	16A
Power consumption	<2W
Power regulator	Time cycle 30 min.
Ambient temperature	5°C to 40°C
Temperature range	5°C to 40°C
Storage temperature	-30°C to 70°C
Hysteresis	0.3°C to 3.0°C (default 0.5°C)
Humidity	10% to 85% RH
Compatible with NTC-sensor with values	6.8, 10, 12, 15, 22, 33, 47 or 100kΩ @ 25°C
Length NTC sensor	Max. 50 meters
Screw terminals	Max. 2.5mm ² 2Nm
IP Code	IP21
Size (LxWxH)	84 x 84 x 45.5mm

APPROVALS

CE, Nemko

Working frequency 2.4GHz, Max output power 18.10dBm. The distance between user and products should be no less than 20 cm. There is no restriction to use this product across the EU countries.

Hereby, Heitat Controls AB, declares that this device is in compliance with the essential requirements another relevant provisions of Directive 2014/53/EU.

MAINTENANCE

The product is maintenance-free. Indoor use only.



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

We develop and design our products according to our strict quality requirements (ISO 9001) and environmental requirements (ISO 14001). All electrical installations must be carried out by an authorized electrical installer. The product must be installed in accordance with our installers manual and national building codes. Any wrongful installation, misuse, damage of the product, is not covered under warranty. Updated documentation is available at www.heatit.com and/or documents.heatit.com. Heitat Controls AB can not be held liable for any type of errors or omissions in our product information. Product specifications may change without further notice.

GET THE MYHEATIT APP HERE



Org. doc. 02.04.2024



Heatit Controls AB | Läkarvägen 4, 454 31 BRÄSTAD, SWEDEN
Phone: +46 61 18 77 77 | post@heatit.com - www.heatit.com

